


MASTIC® EVERPLANK™ HORIZONTAL SIDING INSTALLATION


EXPERT INSTALLATION TIPS | GETTING IT RIGHT THE FIRST TIME

SHEATHING

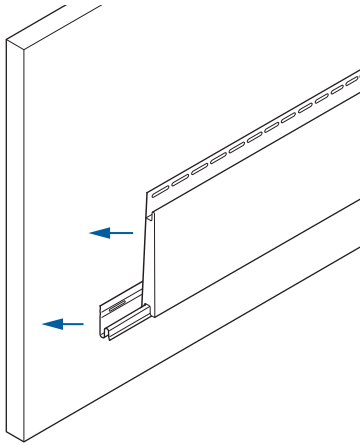


Install on solid nail base sheathing, such as plywood or OSB, or over soft board sheathing with studs every 16" on center. A water resistive barrier (WRB) is necessary for a proper and secure installation.

CORNER POSTS

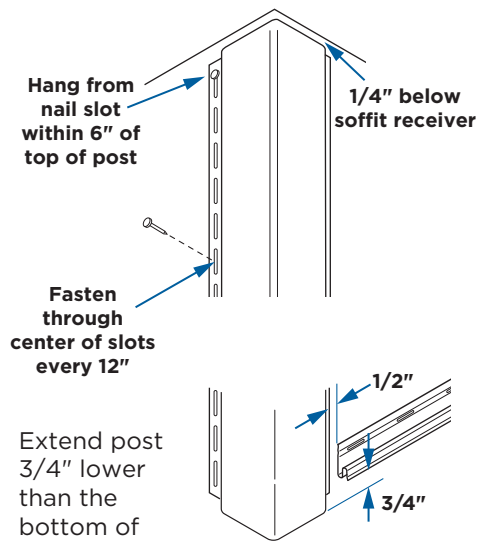


Extend post 3/4" lower than the bottom of the starter strip. To allow for expansion/contraction, align starter strip 1/2" from the post.

STACK LOCK PANELS

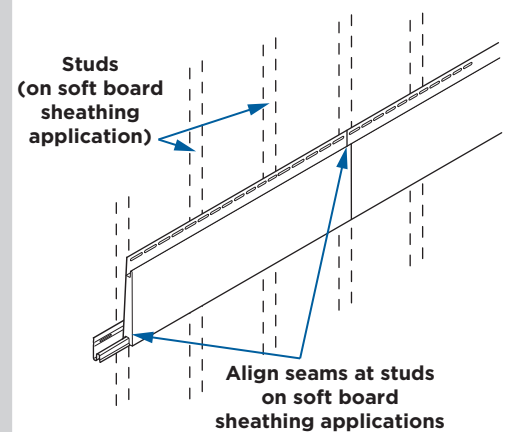


Panels must butt together at stud location. Firmly lock on starter strip or course below. Butt panels at ends. Fasten every 16". **Stop fastening 36" from seam to be bonded to allow room for Bonding Plate to slide in.**

ADHESIVE

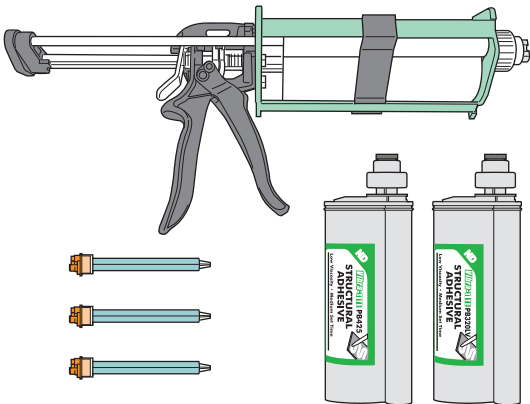

Warm weather formula (**Vibra-Tite PB425**) is recommended for approximate temperatures of **65° F and greater**. Cold weather formula (**Vibra-Tite PB320LV**) is recommended for approximate temperatures **up to 65° F**.

BONDING PLATE

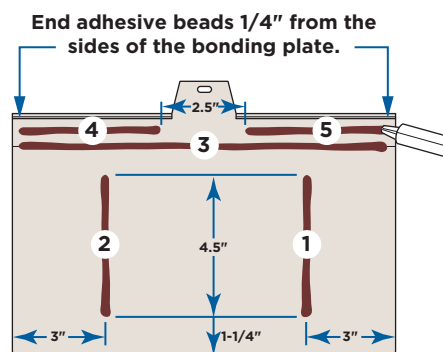

Purge adhesive per installation instructions and apply properly mixed adhesive in order shown.

NOTE: It is critical the adhesive is applied in the order shown.

Learn more
about proper
installation and
view expert
training videos

Click or scan the
QR code below.




bit.ly/3GQhKIU

MASTIC® EVERPLANK™ HORIZONTAL SIDING INSTALLATION

EXPERT INSTALLATION TIPS | GETTING IT RIGHT THE FIRST TIME


ATTACH PANELS

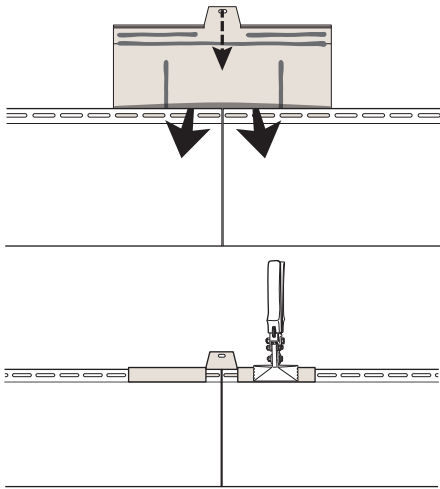


Insert and slide Bonding Plate panel down into starter strip or top lock of course below. Bend tabs and crimp firmly using a 3" hand seamer.

FASTEN


Soft board sheathing: fasten into stud through center tab and every 16".

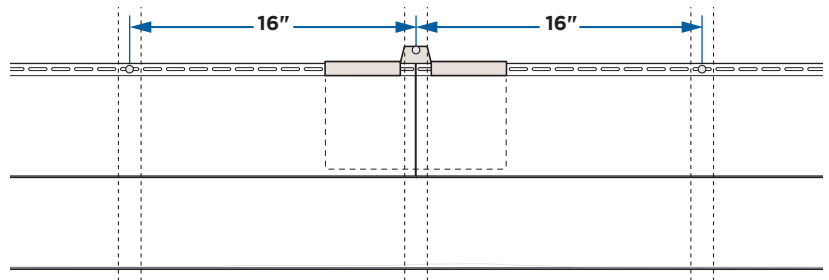

Nail base sheathing: fasten through slots next to Bonding Plate and every 16".

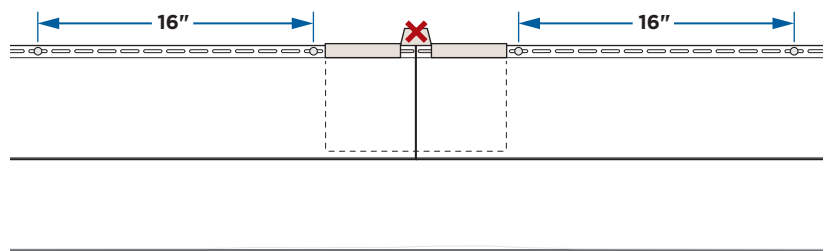

TOP COURSE BONDING PLATE

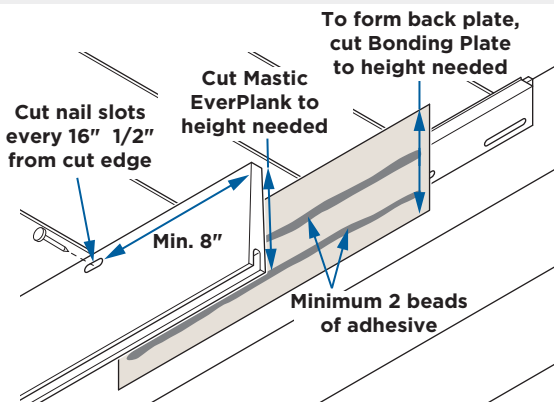


Use tin snips to cut Mastic EverPlank Bonding Plate to height needed to rest in the channel of the previous course.


Add at least two beads of adhesive, 1" apart. Center and insert bonding plate in channel of course below.

Do not place fasteners behind the bonding strip.


TOP BONDING STRIP (EPBONSTRP)

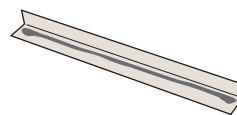


Apply adhesive to the inside bend on the 1" wide section.

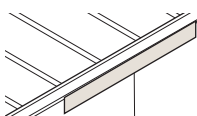

Press the Bonding Strip across the top edge of the panels bridging the seam. There should be no fasteners behind the Bonding Strip.

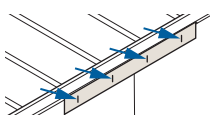

Shoot 4 staples (1/4" crown x 1/2" leg) through the face of the bonding strip and into the panels. Do not overdrive the staples.

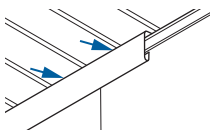

Snap Top Course Face Plate (ETCFP) into back plate.

Learn more
about proper
installation and
view expert
training videos

Click or scan the
QR code below.



bit.ly/3GQhKIU